

MONTAGEANLEITUNG – Ketten Trenn- und Nietwerkzeug DE


MTP22522 (Für Nietschloss/nicht für Hohlnietschloss!)

Passend für 520er, 525er, 530er und 532er Ketten.

MTP RACING

Trennwerkzeug

Nietwerkzeug

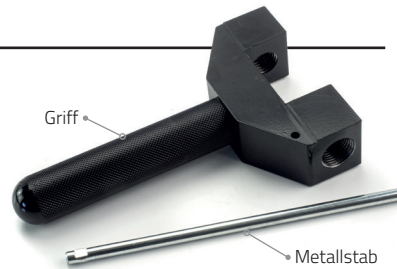

1 Spannschraube eindrehen und mithilfe des Metallstabes anziehen





2 Kette einspannen und Druckschraube mit passendem Schraubenschlüssel anziehen



3 Dorn einsetzen und Nietstift mithilfe eines Hammers herausschlagen.

4 Trennwerkzeug vom Griff lösen und Nietwerkzeug montieren

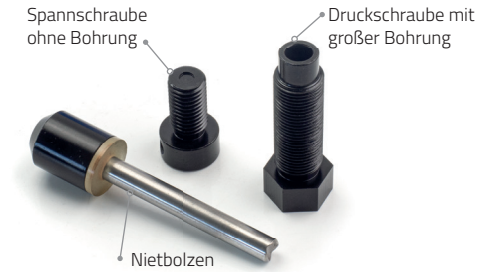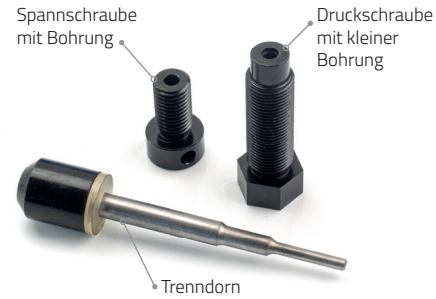

5 Kettenschloss wechselseitig anziehen.



6 Bolzen durch Druckschraube führen und Kettenstift mithilfe eines Hammers vernieten. Bolzen um 90° drehen und zweite position vernieten, sodass die Niete an allen seiten abgerundet ist.


ASSEMBLY INSTRUCTION – chain tool

MTP22522 (For rivet lock / not for hollow rivet lock!)

Suitable for 520s, 525s, 530s and 532s chains.

EN

MTP RACING

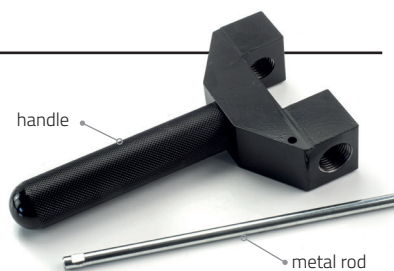

- 1 Insert the clamping screw and tighten it by using the metal rod.




- 2 Clamp the chain and tighten the pressure screw with a suitable wrench.




- 3 Insert the arbor and knock out the rivet pin by using a hammer.
- 4 Detach the separating tool from the handle and mount the riveting tool.

separating tool

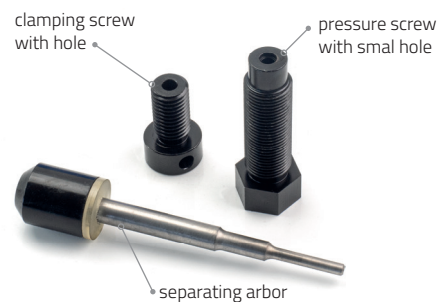

riveting tool

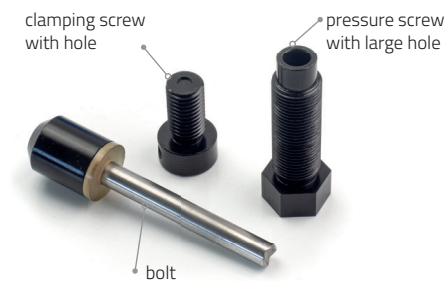

- 5 Tighten the chain lock alternately.

- 6 Insert the bolt through the pressure screw and rivet the chain pin using a hammer. Turn bolt 90° and rivet second position so that the rivet is rounded on all sides.